

Not all features may be available

OSD functions:

Volume mute	- Off/On +
Volume (note 1)	Increase/decrease sound output volume if Audio board is installed. Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 32 steps
Brightness	Increase/decrease panel brightness level. Press – or + (- ■■■■■■■■□□□□□□ + nnn), total: 256 steps
Contrast	Increase/decrease panel contrast level Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 192 steps
Sharpness (note 2)	Adjust sharpness level Press – or + (- ■■■■■■■■□□□□□□ + n), total: 10 steps
Video input	Set which input signal (S-video or composite) has priority if both are connected and active. Press – or + (Comp / S video)
Colour	Increase/decrease the image colour level Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 64 steps
Tint	Increase/decrease the tint level Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 256 steps
Image vertical position	Adjust the image vertical position (up & down) Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 64 steps
Image horizontal position	Adjust the image horizontal position (left & right) Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 18 steps
Image size – horizontal	Adjust the image horizontal size Press – or + (- ■■■■■■■■□□□□□□ + nnnn), total: 32 steps
Image expansion	Adjust vertical image size (ON = 10% expansion) Press – or + (Off / On)
System info ▶	Shows current system information and turns on the submenu. Press + turns on submenu (e.g. Vmode)
Exit menu	Turn off the OSD menu. Press + turns off the OSD menu.
Extended menu ▶	Turn on the extended menu. Press + turns on the extended menu.

Items marked ▶ have sub menus.

System Info – sub menu

Display type	TFT LCD 1280x1024 (or other display modes, e.g. 1024x768)
Model	Shows the model number of the board, e.g. AV-1280
BIOS version	Shows BIOS version
Run time	Shows the accumulated running time of the board since last reset (nnn Hrs nn Min)
Back to main menu	Go back to main menu Press + or – returns to main menu.

Extended menu

Power down option (note 1)	Set automatic power down option when no video signal in Press – or + (Off / On)
Direct access 1	Turn on direct access table 1. Press + or – turns on table 1.
Direct access 2	Turn on direct access table 2. Press + or – turns on table 2.
Video system (note 2)	Select video system Press – or + (AUTO / NTSC / PAL / SECAM)
Exclusive or priority	Exclusive: disable “Video input” option; Priority: enable “Composite or S-video selection” option. (Exclusive / Priority)
OSD vertical position	Move OSD menu vertically. Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 192 steps
OSD horizontal position	Move OSD menu horizontally. Press – or + (- ■■■■■■■■□□□□□□ + nn), total: 40 steps
Image Vert. Inverse	Vertically inverse the image Press – or + (Off / On)
Image Hori. Inverse	Horizontal inverse the image Press – or + (Off / On)
Menu time out	Set menu time-out period Press – or + (10 / 20 / 30 / 45 / 60 / cont sec.)
Menu auto save	Press – or + (No / Yes)
Language	English OSD only
Back to main menu	Go back to main menu

